# LYSAR BC / BF Series

# **ENGLISH**

**Installation Manual** 



# Table of contents

1.	Product description	3
2.	Safety Warnings	4
	2.1 Proper use	4
	2.2 Product safety	4
	2.3 Risk levels	6
3.	Available versions	7
4.	Guide to installation	8
	4.1 Product sizes	8
	4.2 Mounting accessories	8
	4.3 Installation	9
5.	Plug-in	11
6.	Switch on-off	11
7.	Troubleshooting	12
8.	Light source replacement	12
9.	Product maintenance and cleaning	12
10.	Repairs	13
11.	Warranty	13
12.	Product Disposal	13
13.	Technical data	14
14.	Meaning of symbol keys	14
15.	Declaration of conformity	15



Lysar BC



Lysar BF

# 1. Product Description

Compact dimensions, they are ideal for workstations and manual machine tools such as manual and semi-atuomatic cutters, parallel lathes, drills, brushing machine. Available with short arm BC and flex arm.

- Anodized aluminum spot lamp
- High efficiency LED technology
  free maintenance
- 3 Power LED light source
- 5000 K ligh color
- 24 Vdc power supply (integrated driver LED)
- 40° lens available
- IP54 degree of protection

# 2. Safety instructions

LYSAR BC/BF Lighting Series has been designed and manufactured on the basis of state-of-the-art techniques.

It is made of well-selected, high-quality materials. It is carefully tested throughout the production process, from the raw material through to packaging, following a detailed production schedule so as to guarantee that the product is safe and reliable.

Material damages, as well as bodily injuries, may nevertheless still occur while using it.



- This manual is part of the equipment and must always be kept with it.
- Please make sure that ALL instructions/information in this manual are carefully read through
- Strict compliance with the instructions provided in this manual and on the lighting, equipment is required for its correct use
- Installation and use of the product is recommended only provided it is in perfect conditions, and the

- user is well-acquainted with all safety instructions
- CCEA, the manufacturer, waives any responsibility in case of product tampering or improper use

### 2.1 Proper use of product

This lighting equipment is not suitable for installation inside machine with a wet environment, requiring a degree of protection higher than IP54.

#### 2.2 Product Safety

#### **Electrical Risks**

The improper and incorrect use of the equipment may cause body injuries and material damages.

- All electrical connection procedures must be carried out by a licensed electrician
- Switch off power supply before any installation, maintenance or reparation procedures.
- Please ensure that the power supply rated tension and frequency meets the requirements shown on the product label. Please respect cable polarity.
- Maintenance and reparations must only be carried out by qualified electricians.

# **Risk of explosion**

The risk of the explosion might occur upon installing and using this

product for applications with a high risk of explosion. It might cause severe body injuries.

Do not install and use this product in hazardous environments (high risk of explosion).

### Installation and safety

- Handle the lamp with care and avoid having it drop or being hit even it is still packed, which might cause body injuries, as well as material damages.
- Ensure the original fixing accessories are used, as available from the manufacturer.
- Set up the fixing accessories properly.
- The equipment must be correctly fastened using the proper screws according to the application, place and surface where the product is being mounted.
- Ensure that the fastenings are regularly checked.

# Danger of dazzling glare due to a white light source

Avoid staring directly at the light source, as it may cause a temporary reduction of vision. Irritation, aches, damages, or accidents may as well occur.

- Avoid staring directly at the light source.
- The device must be adjusted so as to avoid having the light

flow directed towards the eyes.

# Danger caused by inappropriate spare parts.

Using inappropriate spare parts may cause bodily injuries and material damages.

Do not use spare parts that have not been approved by the manufacturer.

# Damage caused by presence of laser beams

Use of the LYSAR BC/BF Series Led lighting equipment is not allowed when a high-power laser is operating, since it may damage the Led source.

### Danger due to high temperatures

Installing and using the equipment in all the environments where the existing temperature remarkably exceeds the foreseen operating temperature will considerably reduce Led lifetime while damaging as well the built-in electronic components.

- ▶ Do not use this Device in environments where the operating temperature of the device is exceeded.
- Operating temperature -4°/113°F (-20 / +45 °C)
- Avoid direct solar radiation.

### Danger due to repairs

Having the product disassembled or repaired without any appropriate technical /electrical

Levels of risk ENGLISH

knowledge may cause damages to persons and objects.

- Do not try to repair or disassemble the equipment. Please apply to qualified technicians for any issues.
- Any product tampering or modifications not having been approved by the manufacturer will null and void the warranty.

#### 2.3 Damage risk levels



# **DANGER**

Dangers where noncompliance may <u>immediately</u> severe injuries and eventually lead to death.



# WARNING

Dangers where failure to satisfy requirements <u>may</u> lead to severe injuries or even to death.



# **ATTENTION**

Dangers where failure to satisfy requirements **may** lead to injuries.

# **NOTICE**

Dangers where failure to satisfy requirements <u>may</u> cause damages to objects.

ENGLISH Available versions

# 3. Available versions

Please refer to the table hereunder listing all the lighting equipment, for you to identify the model you need and its main features, for you to have the lighting equipment correctly and efficiently installed and used.

**Note:** The product code is found on the brand name label stuck on the product's backside.


- Find out the product code printed on the brand name label and see if you find it on the table hereunder;
- Compare the codes and see if you can identify the same model on the table hereunder;
- The code printed on the brand name label shows the device's week and year of production.


LYSAR BC							
Model	Optics	Power	Power Usage	E Connection	Weight	Color lamp	Driver LED
LY0321BC1	40°	6 W	24 Vdc	CABLE 9 ft (2.8 m) + M12A	1.32 lb (0.6 kg)	BLACK	integrated
LYSAR BF							
Model	Optics	Power	Power Usage	E Connection	Weight	Color lamp	Driver LED
LY0321BF1	40°	6 W	24 Vdc	CABLE 7 ft (2.2 m) + M12A	2.69 lb (1.25 kg)	BLACK	integrated

Guide to installation ENGLISH


# 4. Guide to installation

#### 4.1 Product sizes

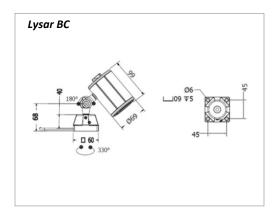

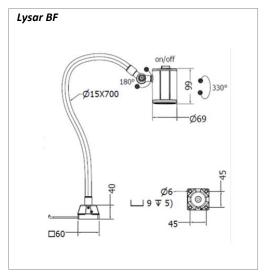

# 4.2 Mounting accessories

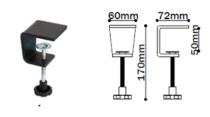

cod. **CLAMP04**Robust, versatile vibration-resistant metal clamp made of black powder-coated stainless steel.

For LYSAR SA model lamp

ENGLISH Installation

#### 4.3 Installation



# **ATTENTION**

# The lamp fall-down may cause damage to persons and objects

- When mounting the lamp ensure that the original fastenings are used, which you may purchase from the supplier.
- Have the fastening accessories correctly mounted.
- Version with flex arm: do not bend the flexible tube and avoid small bending radii.



# **WARNING**

Switch off the power supply before proceeding to installation.

### **Correct installation using screws**

The lamp base has 4 fixing holes for screws. Provide the fixing holes on the dedicated surface following the indications of the fixing distances shown in the figure. Use screws of adequate size and material depending on the application.



Fixing center distances

# Installation Lysar with metal clamp CLAMP04

Fix the clamp to the base of the lamp using the supplied M5 screws. Then fix the lamp on the support surface by adjusting the thickness with the appropriate handwheel knob



# **NOTICE**

#### Damaged or broken lamp.


When mounting the lamp ensure to never completely loosen the screws in order to avoid the lamp fall- down.

NOTE: The fastening parts for this lamp are available as accessories. Please For further details, visit our website:

www.ccealights.com


#### Lamp adjustments

#### Lysar "BC"

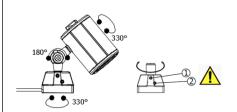

- Unscrew to allow rotation.
  Warning! Do not turn the spot several times on itself so as not to damage the cable.
- 2) Do not unscrew and do not remove.

#### Lysar "BF"

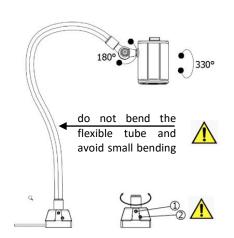

- 1 Unscrew to allow rotation. Warning! Do not turn the spot several times on itself so as not to damage the cable.
- 2 Do not unscrew and do not remove

ENGLISH Plug-in

# 5. Plug-in

# **NOTICE**

# Material damages caused by liquid leakage

- Use a connector securing the same degree of protection as the lamp, if not greater.
- Ensure that the power cord is correctly plugged into the female connector.

# 5.1 Low voltage plug-in with M12 connector

### **NOTICE**

# Wrong wiring may cause damages to the lamp

- All electrical connections have to be carried out by qualified electricians.
- Please respect the polarity of connectors
- Always use the power cord supplied with the lamp.
- Ensure that the supply voltage range to the lamp is closely respected in order to avoid damaging the Led drivers. Voltage range 22 ÷ 30 VDC.





# Standard version: M12 3P Male connector A Coding (on the lamp)

#### PIN Connection

- 1 DC + (24VDC)
- 3 DC (0VDC)
- 4 Not connected

#### 6. Switch on - off

Lysar BC / BF series are equipped with a single pole on/off switch located on the spot.

Maintenance ENGLISH

### 7. Troubleshooting

In case the lamp doesn't turn on:

- Check that the lamp is properly wired to the supply voltage.
- Check that polarity wiring has been carried out correctly.

Please contact CCEA'S USA Technical support service in case the lamp is defective

CCEA Technical Support Service Phone: +39 0444 572083 ccea@ccealights.com www.ccealights.com

# 8. Replacing the Led light source

The outstanding lifetime of the LED light source, over 60.000 hours, makes it unnecessary to replace the PCB LED if the lamp is properly installed and used following the instructions in this manual. Please contact CCEA's Technical Support service - or your Reseller – in case the replacement of the PCB LED is needed for any defects not covered bv warranty.

# 9. Product maintenance and cleaning



Switch off the power supply before any installation, maintenance, or reparation procedures.

This product is maintenance-free.

- Lamp cleaning is to be carried out only after it has been switched off and surfaces have cooled.
- Carefully rinse the lamp surface with a mild cleanser and then wipe off using a soft cloth in order to avoid scoring

#### NOTICE

All material damages caused by liquid leakage may damage the lamp.

### 10. Repairs

#### **NOTICE**

# All material damages caused by poorly executed repairs may damage the lamp

- All repairs must be carried out by the manufacturer or by qualified technicians.
- Only use spare parts having been approved by the manufacturer.

# 11. Warranty

#### Terms of warranty

CCEA ensures that any control procedures or repairs — to be carried out exclusively at/by CCEA Technical service dept. or by any CCEA'S official dealer — are covered throughout the entire product's lifetime. In view of the above, take care to preserve the product label and case, to be submitted if any repair operations are needed.

All repair and spare parts costs will be notified after the defects have been examining.

The warranty does not cover:

- Any transport, packaging, or shipping costs;
- Any damages or deterioration caused by:
  - -Installation and/or operation carried out following different ways;

- Any unauthorized repairs or attempts to repair the product;
- Equipment operation under environmental conditions other than those specified in the user manual;
- Liquid leakages inside the lamp;
- Failure to follow the safety precautions related to transport and to shipping the product back for repair (please make sure to have it shipped back in its original case).

### **Period of warranty**

The warranty period covers 24 months, starting from delivery date. CCEA guarantees that the products have no manufacturing defects or malfunctioning.

# 12. Product disposal

All the electrical and electronic equipment (WEEE) have to be managed with a selective waste sorting and cannot be disposed of as municipal waste, as provided for in Directive 2012/19/UE.

view of the above this equipment, all its components, subsystems and the consumables which are an integral part of the product have to be conveyed to the local collection facilities for them to be disposed of in with accordance the current legislation.

Please apply to the council offices of your place of residence in order

to know where the collection facilities are located.



# 13. Technical data

NOTE: Please refer to the data printed on the label stuck on the lamp.

Power supply	24 Vdc
Power input	6 W
Light color temperature	5000K
CRI	80
Operating temperature	-4 F° / 113° F (-20 / +45°C)

For any further information please refer to the table at page 7

# 14. Symbol keys

C€	CE Conformity marking			
(ii)	Protection class III device			
IP54	Degree of protection IP54			

### 15. Declaration of Conformity

C.C.E.A. SRL, via Piave, 2 - 36077 Altavilla Vicentina (VI), Italy – VAT and Tax number 02374040240 hereby declares that the light equipment named LYSAR BC / BF series – to which the present Declaration of Conformity is related - was manufactured by CCEA SRL in accordance with the following Directives: 2014/35/UE on Low Voltage Equipment Safety and the Directive of Electromagnetic Compatibility 89/336/CEE (EMC) 2014/30/UE. The unit complies in particular with the following regulations:

#### Directives:



Machinery Directive 2006/42/EC Low Voltage Directive 2014/35/EU EMC Directive 2014/30/EU

#### Harmonized Standards

- CEI EN 60598-1 "Lighting equipment. Part 1: General instructions and tests"
- CEI EN 60598-2-4 "Lighting equipment part 2: particular requirements part 4 Portable general-purpose luminaries".
- CEI EN 62031 "LED modules for general lighting. Safety specifications".

This is a standard product manufactured following a detailed production schedule ensuring that inspections and destructive tests were carried out, for a safe, functional and sustainable product to be delivered.

C.C.E.A. SRL disclaims any responsibility resulting from tampering and/or wrong use of the device.

C.C.E.A. s r I Via Piave, 2 36077 Altavilla Vicentina (VI) - Italy

Tel. ++39 0444 572083 Fax. ++39 0444 572337 E-mail: ccea@ccealights.com www.ccealights.com

Product code: